

Yamaha Wolverine CV Boot / A-Arm Guards




Extreme Metal Products # 12959

Hardware:

- (4) Pipe Clamps with radius corners
- (4) M6-1.0 X 20mm Lg. Flange Bolts
- (10) ¼-20 X 1 ¼ Lg. Flange Bolts
- (10) ¼-20 Flange Nylon Lock Nuts
- (28) ¼ Flat Washers

Tools:

- 3/8" Socket
- 7/16" Wrench
- 10mm Socket
- Ratchet

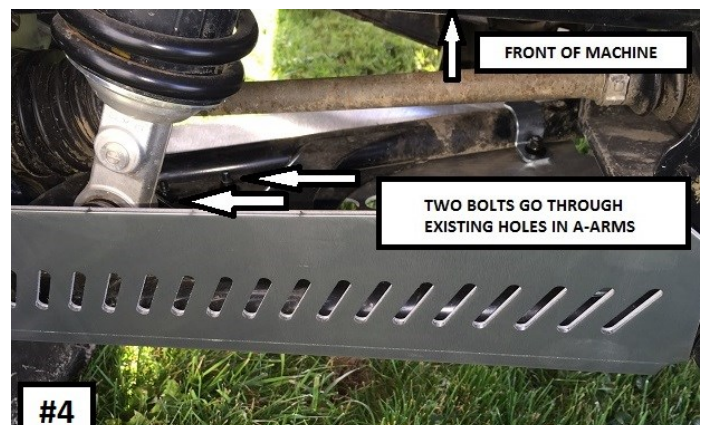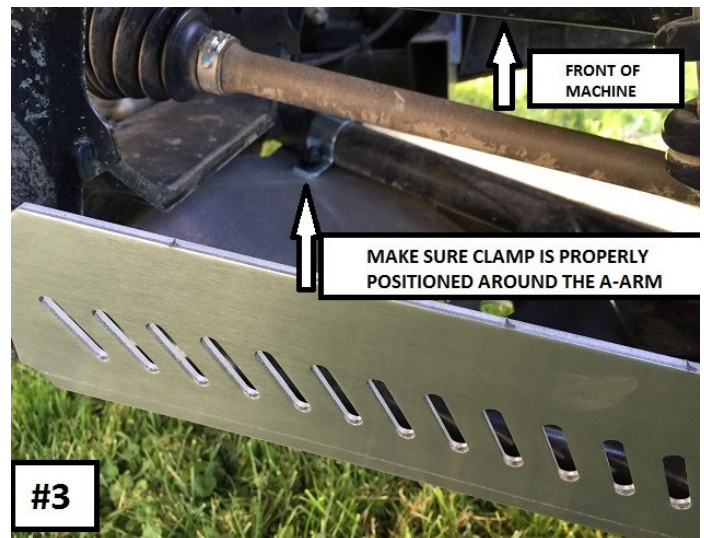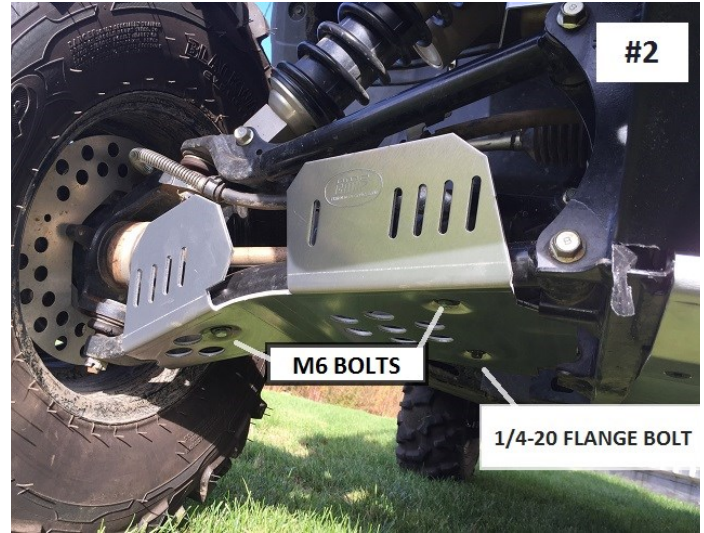

*****Leave bolts loose until all bolts are in, and guard is in place*****

***** Make sure guard is NOT rubbing on any boots or brake lines*****

Front Guard Install (See picture #2)

- 1.) Hold guard up to A-arm
- 2.) Use the M6 bolts (2 per side) to attach the guard
- 3.) In the remaining hole, insert the ¼-20 bolt and nut
- 4.) Once you are aligned and have checked the guard is not rubbing on the boot or brake lines, tighten all nuts and bolts

Rear Guard Install (See pictures #3 & #4)

- 1.) Hold guard up to A-arm
- 2.) Using the ¼-20 bolts and nuts, secure the two holes closest to the tire
- 3.) Use the ¼-20 bolts and nuts to attach the pipe clamps around the A-arm
- 4.) Once you are aligned and have checked the guard is not rubbing on the boot or brake lines, tighten all nuts and bolts



**EXTREME
METAL PRODUCTS**

WWW.EXTREMOMETALPRODUCTS.COM