

P/N 9645 and P/N 9889

Mule Rear Bumper



p/n 9645 fits 3000/3010/4010 and p/n 9889 fits the 600/610

Includes:

1. Bumper
2. (2) Mounting Brackets (L & R)
3. (4) #14 x 3/4" Tek Screw (self drilling)
4. (4) 3/8-16 x 1" Black carriage Bolts
5. (4) 3/8-16 Nylon Nut
6. (4) 3/8 x 3/4" Self Tapping Hex Washer Head Bolts (not pointed)

Instructions:

1. Secure Parking brake and put on your safety glasses.
2. Remove tail lights and save (2 or 4) bolts because you will use them again.
3. Install light into bumper using stock bolts (see picture).
4. Slip the mounting brackets over the square tubes under the rear of the cargo bed. The flanges that the bumper bolts to should face each other (see picture). Using the (4) self drilling Tek screws and a cordless drill with a nut driver run the screws into the square tube.
5. Using the large holes in the brackets for a drill fixture drill two holes (.328 dia.) per bracket. There is a couple extra places to put holes if you make a mistake drilling. Using the 3/8 self threading screws fasten the brackets to the bed (see picture).

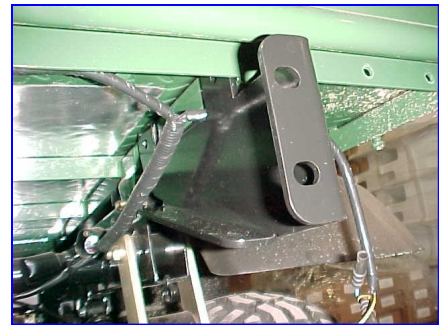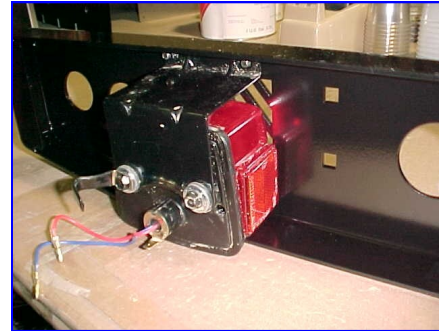

Extreme Metal Products, LLC

WWW.EXTREMOMETALPRODUCTS.COM

WARNING: Bumper should never be used for Road for on road use, it will not protect the driver or passengers in the event of an accident. Bumper should never be used for a tow strap or tie down point, doing so could result in serious injury or death.