


Honda Big Red Winch Mounting Bracket P/N 10331

Fits: Most winches up to 4000 lb.

1. Remove Front Bumper
2. Remove two bolts holding front differential (see fig 1)
3. Set winch in front (see fig 2)
4. Place plate in front area using differential bolts to hold in place. Note: you will have to bolt winch to plate after plate is installed (fig 3)
5. Align plate so bumper bolts will go through holes in front of the plate (fig 4).
6. Install winch with the bolts provided with your winch
7. Re-install front bumper.
8. Attach your fairlead.

Note: There is not any hardware shipped with the mounting plate.

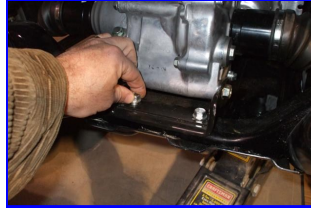

WWW.EXTREMOMETALPRODUCTS.COM