

Arctic Cat Wild Cat Cab Back P/N: EMP-11714

Includes:

1. (1) Polycarbonate Cab Back
2. (6) Rubber Fast Straps (11651)
3. (1) 3/16 x 51" Edge Trim



Installation:

1. Peel back the protective coating on both side along the bottom edge. Slide the edge trim over the bottom.
2. Bolts the rubber "Fast Straps" to the six holes.
3. Wrap the straps around your cage and hook them on the plastic pins.

Arctic Cat Wild Cat Cab Back P/N: EMP-11714

Includes:

1. (1) Polycarbonate Cab Back
2. (6) Rubber Fast Straps (11651)
3. (1) 3/16 x 51" Edge Trim




Installation:

1. Peel back the protective coating on both side along the bottom edge. Slide the edge trim over the bottom.
2. Bolts the rubber "Fast Straps" to the six holes.
3. Wrap the straps around your cage and hook them on the plastic pins.

Arctic Cat Wild Cat Cab Back P/N: EMP-11714

Includes:

1. (1) Polycarbonate Cab Back
2. (6) Rubber Fast Straps (11651)
3. (1) 3/16 x 51" Edge Trim

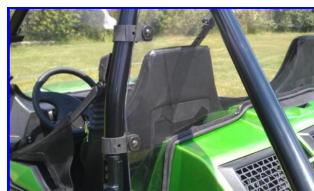


Installation:

1. Peel back the protective coating on both side along the bottom edge. Slide the edge trim over the bottom.
2. Bolts the rubber "Fast Straps" to the six holes.
3. Wrap the straps around your cage and hook them on the plastic pins.

Arctic Cat Wild Cat Cab Back P/N: EMP-11714

Includes:

1. (1) Polycarbonate Cab Back
2. (6) Rubber Fast Straps (11651)
3. (1) 3/16 x 51" Edge Trim

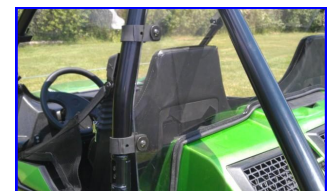

Installation:

1. Peel back the protective coating on both side along the bottom edge. Slide the edge trim over the bottom.
2. Bolts the rubber "Fast Straps" to the six holes.
3. Wrap the straps around your cage and hook them on the plastic pins.