

Polaris Ranger XP900 Front 2" Receiver for EMP Plows P/N: EMP-11906

Includes:

1. (1) 2" Receiver Assembly
2. (2) Z-Shaped Brackets
3. (7) 3/8 x 1" Flange Bolts
4. (6) 3/8 Nylon Nuts
5. (6) 3/8" Flat Washers
6. (1) 5/8" Bent Hitch Pin
7. (1) Hitch Pin Clip
8. (1) Logo Sticker

Installation:

1. Remove the bottom bumper bolts and loosen the top two bolts (loosen only).
2. Swing bumper up and mount the hitch using the hardware provided. The Z-Shaped brackets will go on the top of the plate and bolt the to center holes. These secure the assembly to the frame too.




Polaris Ranger XP900 Front 2" Receiver for EMP Plows P/N: EMP-11906

Includes:

1. (1) 2" Receiver Assembly
2. (2) Z-Shaped Brackets
3. (7) 3/8 x 1" Flange Bolts
4. (6) 3/8 Nylon Nuts
5. (6) 3/8" Flat Washers
6. (1) 5/8" Bent Hitch Pin
7. (1) Hitch Pin Clip
8. (1) Logo Sticker

Installation:

1. Remove the bottom bumper bolts and loosen the top two bolts (loosen only).
2. Swing bumper up and mount the hitch using the hardware provided. The Z-Shaped brackets will go on the top of the plate and bolt the to center holes. These secure the assembly to the frame too.

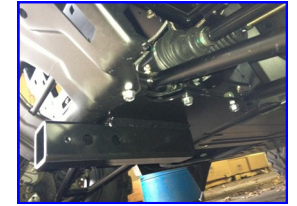

Polaris Ranger XP900 Front 2" Receiver for EMP Plows P/N: EMP-11906

Includes:

1. (1) 2" Receiver Assembly
2. (2) Z-Shaped Brackets
3. (7) 3/8 x 1" Flange Bolts
4. (6) 3/8 Nylon Nuts
5. (6) 3/8" Flat Washers
6. (1) 5/8" Bent Hitch Pin
7. (1) Hitch Pin Clip
8. (1) Logo Sticker

Installation:

1. Remove the bottom bumper bolts and loosen the top two bolts (loosen only).
2. Swing bumper up and mount the hitch using the hardware provided. The Z-Shaped brackets will go on the top of the plate and bolt the to center holes. These secure the assembly to the frame too.



Polaris Ranger XP900 Front 2" Receiver for EMP Plows P/N: EMP-11906

Includes:

1. (1) 2" Receiver Assembly
2. (2) Z-Shaped Brackets
3. (7) 3/8 x 1" Flange Bolts
4. (6) 3/8 Nylon Nuts
5. (6) 3/8" Flat Washers
6. (1) 5/8" Bent Hitch Pin
7. (1) Hitch Pin Clip
8. (1) Logo Sticker

Installation:

1. Remove the bottom bumper bolts and loosen the top two bolts (loosen only).
2. Swing bumper up and mount the hitch using the hardware provided. The Z-Shaped brackets will go on the top of the plate and bolt the to center holes. These secure the assembly to the frame too.

