

# Polaris RZR Full Windshield P/N 9833 With Quick Connect Clamps


## Includes:

1. (1) Windshield
2. (6) P/N 9881 Quick Connect Clamps
3. (1) Edge Grip BR#1120A332 35.375" Long x .188"

## Installation Instructions:

1. Slide Edge Grip over bottom edge of your windshield. A rubber mallet may be helpful. Be sure to center on edge.
2. Remove 1/4-20 nuts from clamps and set aside.
3. Use only the thumbscrews to align clamps. After windshield is properly located secure with 1/4-20 nuts. **Be very careful not to over tighten. The studs can easily be broken.**

**Note: The bottom four clamps are in the same location as the half windshield. You can easily switch from the full to half**

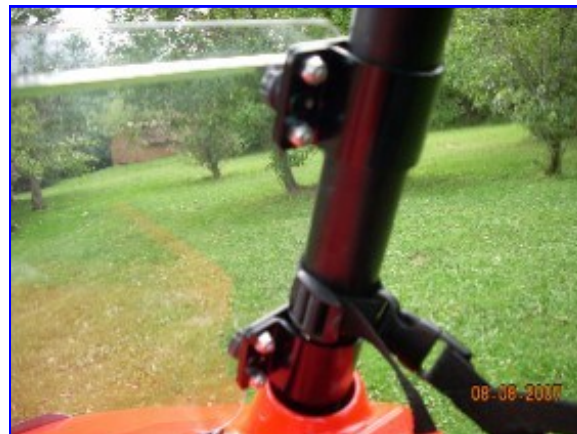

Extreme Metal Products, LLC