

# 2011-12 RZR XP900 Cab Back

P/N: EMP-11088


## Includes:

1. (1) Polycarbonate Cab Back (11088-01)
2. (1) Metal Bottom Stiffener. (11088-02)
3. (2) Tie Down Plunger w/eyebolt
4. (3) 1/4-20 x 1" Black Flange Bolts
5. (3) 1/4" Black Fender Washers
6. (3) 1/4" Nylon Nuts
7. (4) Quick Connect Clamps (9881)
8. (1) LOGO Sticker
9. (1) Hook & Loop Velcro x 16" Long (2012)
10. (2) #14 zip screws

## Installation:

Do not remove protective coating until it is installed.

1. Attach the metal part to the polycarbonate with the 1/4" nuts, washers, and bolts (see the picture).
2. Remove the nuts on the rubber tie down plungers and install polycarbonate under the washers (see picture). Note: 2012 Models do not have the plunger holes. You will have to use the Velcro along the bottom or use the zip screws.
3. Remove the 1/4" nuts from the clamps and set aside. You will put these on last.
4. Using the thumbscrews and the quick connect clamps. Attach the cab back to your XP900. Once, you have everything in the correct location, put the 1/4" nuts on the clamps using a 10mm socket.

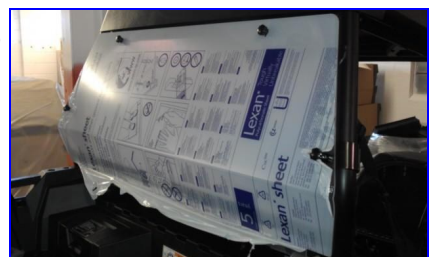

**DO NOT USE AN IMPACT GUN TO ATTACH ANY OF THIS HARDWARE. THE STUDS IN THE CLAMPS CAN EASILY BREAK WITH TOO MUCH TORQUE.**