


John Deere Gator CV Boot Guards
Fits: HPX 4x4, XUV 620i, XUV 850D
Set of Four (Front & Rear)
P/N EMP-10253

Includes:

1. (2) Front Guards (LH & RH)
2. (2) Rear Guards (LH & RH)
3. (4) 5/16 x 1" Bolts (Zinc)
4. (14) 5/16 x 2" Bolts (Zinc)
5. (18) 5/16 Nylon Nut
6. (36) 5/16 USS Flat Washers
7. (6) 3" x 1-1/2" Clamp Plate
8. (1) EMP Logo Sticker

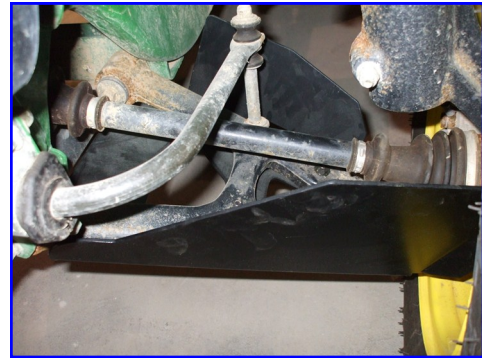

Installation:

Stop vehicle on a level surface. Lock Parking Brake and remove key.

Front

1. Using the 5/16 x 2" Bolts, Nuts, and washers attach the CV Boot Guards to the front A-Arms (see picture 2).



Rear

1. Using (2) Clamp Plates, 5-16 x 1" bolts, washers, and nuts. Attach the outer holes of the guard to the A-Arm. The plate will go on top of the A-Arm (as pictured). Do not tighten yet.
2. Using the remaining Clamp Plates, 5/16 x 2" Bolts, and washers. Put the bolts up through the guard and on both sides the A-Arm tube. You will use the Clamp plates to attach the bolts to the square tube of the A-Arm (as pictured).

