

2009+ Ranger Cab Back
P/N 10287
Must be used with Hard Top P/N 10286


Includes:

1. Two piece cab back (top and bottom)
2. (2) P/N 9881 Quick Connect Clamp
3. (6) 1/4-20 x 3/4" Flange Head Bolt
4. (2) 1/4-20 x 2-1/4 min Hex head bolt
5. (6) Flat Washers
6. (2) 1/4-20 Nylon Nut
7. (2) #14 x 1" TEK Screws (self tapping)
8. (2) Foam Gasket 1/8" X 1" X 15" Long
9. (2) Foam Gasket 1/8" X 1" X 10" Long
(Note: Gasket p/n 8694K68)



Installation:

1. Using 1/4" Flange bolts attach the top and bottom sections together.
2. Stick Foam Gasket to either the ROPS or cab back to protect the center upright tubes of the ROPS.
3. Now, with the help of a friend. Slide the top of the cab back under the spacer on the hard top. As shown in figure 2.
4. Using the 2-1/4" long bolts, washers and nuts attach the cab back the channel on your ROPS. The bolts will go through the slots half way up the cab back.
5. Using the quick connect clamps and the remaining 1/4 bolts attach the lower portion of the cab back to the ROPS.
6. Using the Self drilling screws attach to the center ups right of your ROPS through the two holes near the bottom.

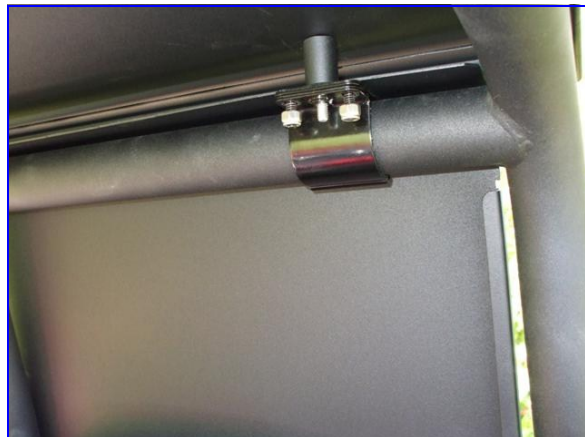

WWW.EXTREMEMETALPRODUCTS.COM
OFF-ROAD ACCESSORIES
Cleveland, Ohio

1-216-267-5335