


Polaris Ranger XP900 Half Windshield with “Fast Straps”
(will not fit RZR XP900)
P/N: EMP-11880

Includes:

1. (1) Half Windshield (11880-01)
2. (4) Rubber “Fast Wraps” with hardware (11651)
3. (1) Edge Trim 3/16” x 47” Long
4. (1) Logo Sticker

Installation:

1. Read the care instructions on the protective coating.
2. Peel back the protective coating along the bottom and around the four slots.
3. Slide the edge trim over the bottom edge.
4. Bolt the “Fast Straps” to the slots as shown (DO NOT TIGHTEN YET).
5. Install the windshield and then tighten the bolts when they are in the correct location in the slots.

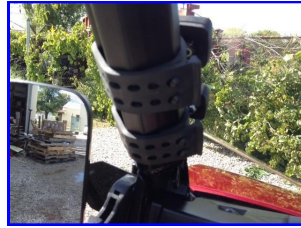

Polaris Ranger XP900 Half Windshield with “Fast Straps”
(will not fit RZR XP900)
P/N: EMP-11880

Includes:

1. (1) Half Windshield (11880-01)
2. (4) Rubber “Fast Wraps” with hardware (11651)
3. (1) Edge Trim 3/16” x 47” Long
4. (1) Logo Sticker

Installation:

1. Read the care instructions on the protective coating.
2. Peel back the protective coating along the bottom and around the four slots.
3. Slide the edge trim over the bottom edge.
4. Bolt the “Fast Straps” to the slots as shown (DO NOT TIGHTEN YET).
5. Install the windshield and then tighten the bolts when they are in the correct location in the slots.



Polaris Ranger XP900 Half Windshield with “Fast Straps”
(will not fit RZR XP900)
P/N: EMP-11880

Includes:

1. (1) Half Windshield (11880-01)
2. (4) Rubber “Fast Wraps” with hardware (11651)
3. (1) Edge Trim 3/16” x 47” Long
4. (1) Logo Sticker

Installation:

1. Read the care instructions on the protective coating.
2. Peel back the protective coating along the bottom and around the four slots.
3. Slide the edge trim over the bottom edge.
4. Bolt the “Fast Straps” to the slots as shown (DO NOT TIGHTEN YET).
5. Install the windshield and then tighten the bolts when they are in the correct location in the slots.



Polaris Ranger XP900 Half Windshield with “Fast Straps”
(will not fit RZR XP900)
P/N: EMP-11880

Includes:

1. (1) Half Windshield (11880-01)
2. (4) Rubber “Fast Wraps” with hardware (11651)
3. (1) Edge Trim 3/16” x 47” Long
4. (1) Logo Sticker

Installation:

1. Read the care instructions on the protective coating.
2. Peel back the protective coating along the bottom and around the four slots.
3. Slide the edge trim over the bottom edge.
4. Bolt the “Fast Straps” to the slots as shown (DO NOT TIGHTEN YET).
5. Install the windshield and then tighten the bolts when they are in the correct location in the slots.

