

Artic Cat Prowler Half Windshield


P/N 9767

Includes:

1. (4) #10-32x3/4" Truss Head Screw
2. (4) #10-32 Nylon Nut
3. (8) #10 Rubber Washer (90130A012)
4. (4) Black Powder Coated Stainless Steel Straps (P/N 9767-02)
5. Polycarbonate Windshield

Instructions:

Install windshield using diagram to the right as a reference.

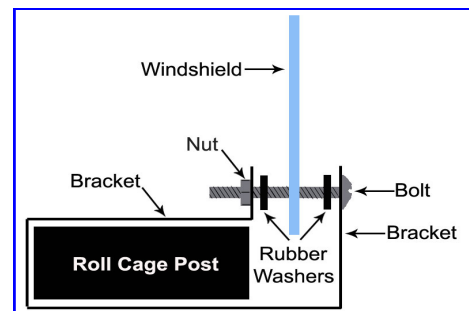

Extreme Metal Products, LLC
1-216-267-5335

Warning: Windshield should always be removed when hauling Prowler on a trailer. Serious injury or death could occur if windshield were to blow off.